

DIY double linked blinds install guide

Thanks for choosing Urban Curtains + Blinds for your new blinds. To help you out we have created this easy to follow install guide.



For each double linked blind, you would have received a set of brackets that look like this if you have our standard system, or will be more 'bubble shaped' if you have selected our Ultra Glide system. Linked blinds will either have one control end on LH or RH, or control ends on both sides. These need to be screwed into the top of your window frame, hard up against each side, ideally 10mm set back from the front edge.




The bracket shown in the image is for the pin end of the blind. The other bracket with the tongue is for the chain winder end of the blind. On a set with two control ends, you will only have received 2x of this other bracket.

Once both corner brackets are in place you are ready to fit the centre linking bracket. This step will be easier with 2 people.

First lift the left hand blind into place. Place the chain control side up first by sliding the tongue of the bracket into the chain winder. While holding the blind, place the link bracket onto the female pin end and mark the window frame with a pencil. Attach the link bracket where you have marked.



Start with the bottom LH blind (generally a sunscreen). Place the chain/motor side of the blind up first by sliding the tongue of the bracket into the chain winder/motor. Then move to the other side of the blind, the female pin end should just slide into the groove of the link bracket.

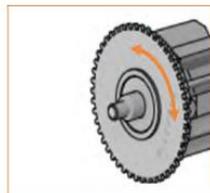

This end of the blind either contains a female or a male pin that can be extended or concealed by turning the wheel. Concealing the pin can help during installation if the fit is tight.

If the blind does not reach, you can turn the wheel the opposite way to extend the pin out further, and again for a second time if needed. This is handy if there has been a slight mis-measure.

Now you are ready to hang the right hand blind. To do slide the tongue of the bracket into the chain winder. Then retract the male pin end by turning the clear wheel anti clockwise. Hold the blind up to the bracket and turn the clear tab clockwise to extend the bracket into the female end.

Repeat these steps for the front blackout blinds.

IMPORTANT

Please make sure the blind is not wound down lower than the drop measurement and that the fabric is still wrapped around the top tube. Going beyond this will damage the blind and void the warranty.



We have also supplied a child safety hook for the chain. Place the chain in the hook and then pull the hook down so the chain can move easily but stays secure. Screw this into place.

Done! You can now start enjoying your new blinds. Please remember if you get stuck - give us a call.

**Thanks,
From the team at
Urban Curtains + Blinds**