

# DIY Ultra Glide Single Blinds Install Guide

Thanks for choosing Urban Curtains + Blinds for your new blinds. To help you out we have created this easy to follow install guide



For each blind, you would have received a set of brackets that look like the image below. These need to be screwed into the top of your window frame, hard up against each side, ideally 10mm set back from the front edge.




The image of the bracket to the left is for the chain winder end of the blind. The bracket on the right is for the pin end of the blind.

Once both brackets are in place you are ready to fit the blind. This step can be easier with 2 people.

Place the chain/motor side of the blind up first by sliding the tongue of the bracket into the chain winder/motor. Then move to the other side of the blind. The pin end should slide into the groove and then "click" into the hole.

This end of the blind contains a pin that can be extended or concealed by turning the wheel. Concealing the pin can help during installation if the fit is tight.

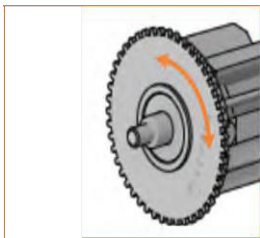

If the blind does not reach, you can turn the wheel the opposite way to extend the pin out further, and again for a second time if needed. This is handy if there has been a slight mismeasure.

## IMPORTANT

Please make sure the blind is not wound down lower than the drop measurement and that the fabric is still wrapped completely around the top tube. Going beyond this will damage the blind and void the warranty.



We have also supplied a child safe tensioner for the chain. Place the chain in the hook and then pull the hook down so the chain can move easily but stays secure. Screw this into place.

Repeat these steps for the rest of your blinds.

Done! You can now start enjoying your new blinds. Please remember if you get stuck or have any questions - give us a call and we can help you out.

Thanks,  
From the Team at  
Urban Curtains + Blinds