
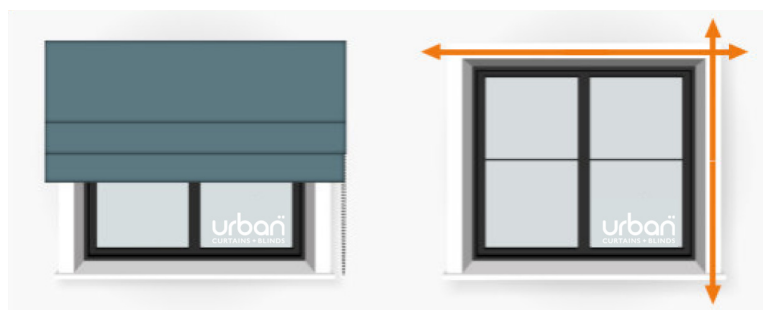


## Measurement guide for Roman Blinds

Measuring for your blinds is easy. All you need is a tape measure. You need to capture the measurements in millimetres so accuracy is important. We will make adjustments for mounting brackets. Here is the guide to fit your blinds inside or outside your window. If you need further assistance please contact us at Urban Curtains + Blinds.

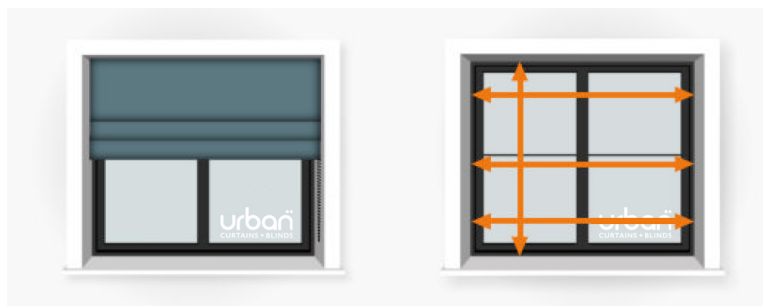

**urban**  
CURTAINS + BLINDS

### INSIDE FIT

#### Width

Starting from the top of the window frame take a measurement from inside the frame. Do this again half way down the window frame and then again from the bottom. Write down the smallest measurement as your width. Please keep in mind that if the three widths are very different, your window is not square and the blind may be loose/tight in some areas.

#### Drop

Take a measurement from the top inside of the frame to the bottom inside of the frame. Write down this measurement as your drop.

### OUTSIDE FIT

When outside fitting your roman blinds it is usual to fit the blind 200mm above the architrave and a minimum of 30mm on either side of the frame. This ensures the blind will cover the privacy line and also ensures it can be fitted level whilst still covering the framing.

#### Width

Decide how much of the window frame you want the blind to cover and then take a measurement across. Write down this measurement as your width.

#### Drop

Decide how far above and below the window frame you want the blind to cover and then take a measurement between the top and bottom. Write down this measurement as your drop.